




Z1231-EZ

ADJUSTMENT INSTRUCTIONS FACTORY ASSEMBLY

Dimensional data (inches and [mm]) are subject to manufacturing tolerances and change without notice.

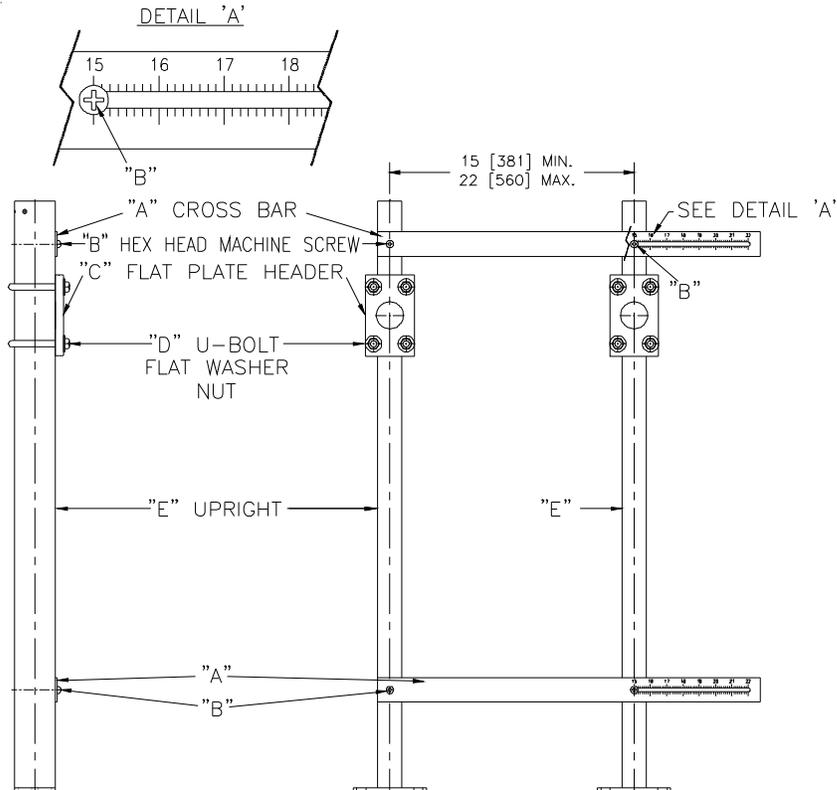

- STEP 1. Refer to installation instructions in the box/bag containing the arms and sleeves to determine the appropriate dimensions for the fixture.
- STEP 2. Measure from the bottom of the upright ("E") to the center of the large tapped (1-1/4 - 11-1/2 NPT) hole in the flat plate header ("C") to the set height dimension for centerline of sleeves. Tighten the nuts and U-bolts ("D") to secure flat plate headers ("C") to each upright ("E").
- STEP 3. Slightly loosen the two hex head machine screws ("B") which are in the right hand side upright at the stamped in ruler and slot on cross bars ("A"). Make sure the bottom of the uprights ("E") are sitting on a flat surface if standing up or against an even surface if laying down, to make sure the bottoms are even. Using the stamped in ruler on the cross bars ("A") slide the right hand upright ("E") to the desired location until the center of the top and bottom hex head machine screws ("B") are at the proper stamped in ruler mark (i.e. 17-1/2, 18-1/4, etc.) for the center to center spacing between the uprights ("E") which will then give the sleeves and arms their correct center to center spacing dimensions. Tighten the two hex head machine screws ("B").
- STEP 4. Recheck tightness of all U-bolts and nuts ("D") and hex head machine screws ("B").
- STEP 5. Mount uprights ("E") to concrete floor using 1/2" lags (furnished by others).

⚠️ WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov
⚠️ ADVERTENCIA: Cáncer y daño reproductivo - www.P65Warnings.ca.gov
⚠️ AVERTISSEMENT: Cancer et effets néfastes sur la reproduction - www.P65Warnings.ca.gov

*Regularly furnished unless otherwise specified.