



ZPD1-H

ZURN POD PRO SHALLOW FLOOR DRAIN WITH CLAMPING FRAME, CLAMPING COLLAR, AND DROP-IN OUTLET FOR VINYL SHEET FLOORING INSTALLATION INSTRUCTIONS

WARRANTY NOTICE: Failure to adhere to these installation instructions, installation by unqualified personnel, or selecting an unsuitable product for the application may void any warranty associated with the product.

IMPORTANT SAFETY INFORMATION: Appropriate personal protection equipment (PPE) is required during installation of this product to minimize the risk of injury (e.g. safety glasses, hand protection, etc).

Installation Exclusively for Vinyl Sheet Flooring


Step 1 – Cut 5 1/2" [13.9.7 mm] diameter hole into sub flooring where floor drain is required and clean flooring of any dirt or debris.

Step 2 – Secure drain body to sub flooring with screws or construction adhesive (supplied by others).

Step 3 – Install waterproofing per manufacturer's instructions. Ensure membrane lays fully flat and is properly sealed to body.

Step 4 – Cut 4 small holes for clamping frame screws into membrane and add a drop of silicone over each hole.

Step 5 – Place clamping frame onto membrane, aligning holes in frame with body. Using frame screws from bag labeled "A", tighten screws to 20-25 in-lbs [2.3-2.8 N-m]. See **Figure 1**.

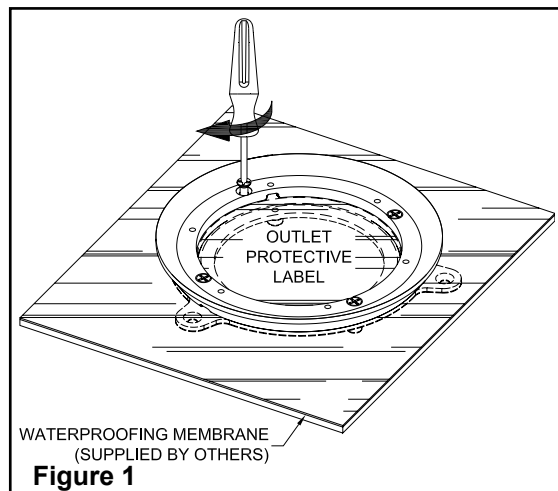

Warning: Hand protection must be worn while performing Step 6.

Step 6 – Cut membrane by using inside edge of clamping frame as guide. See **Figure 2a**.

- a. Ensure no waterproofing or flooring is over hanging edge of body for outlet seat. Reference **Figure 2b** and **2c**.

NOTE: DO NOT CUT SEALING SURFACE OF BODY WHERE OUTLET PROTECTIVE LABEL IS APPLIED.

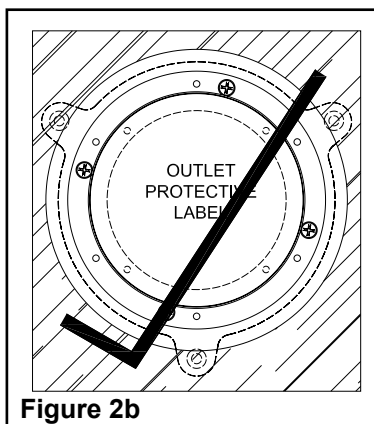
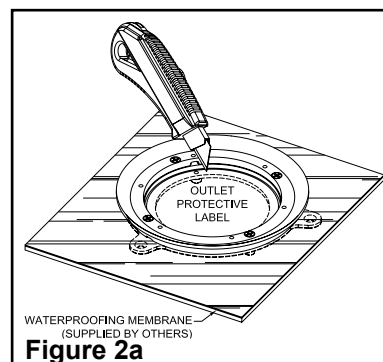


Figure 2b

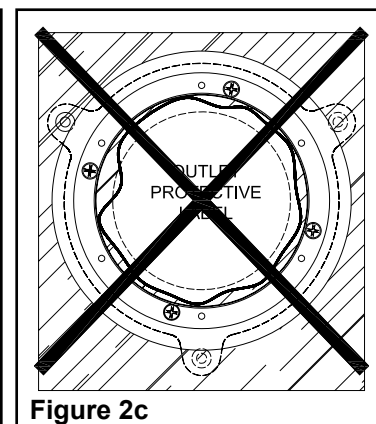


Figure 2c

⚠ **WARNING:** Cancer and Reproductive Harm - www.P65Warnings.ca.gov

⚠ **ADVERTENCIA:** Cáncer y daño reproductivo - www.P65Warnings.ca.gov

⚠ **AVERTISSEMENT:** Cancer et effets néfastes sur la reproduction - www.P65Warnings.ca.gov

Zurn Industries, LLC | Specification Drainage Operation
1801 Pittsburgh Avenue, Erie, PA 16502, Ph. 855.663.9876

In Canada | Zurn Industries Limited
7900 Goreway Drive, Unit 10, Brampton, Ontario L6T 5W6, Ph. 877.892.5216

www.zurn.com

Rev. A
Date: 08/12/25
C.N. No. 147127
Patent zurn.com/patents
Form# FD140

Page 1 of 4




ZPD1-H

ZURN POD PRO SHALLOW FLOOR DRAIN WITH CLAMPING FRAME, CLAMPING COLLAR, AND DROP-IN OUTLET FOR VINYL SHEET FLOORING

INSTALLATION INSTRUCTIONS

Step 7 – Before pouring thin-set, thread in 3 screws from bag labeled 66599-446 into the holes at the weep hole locations.
See **Figure 3**.



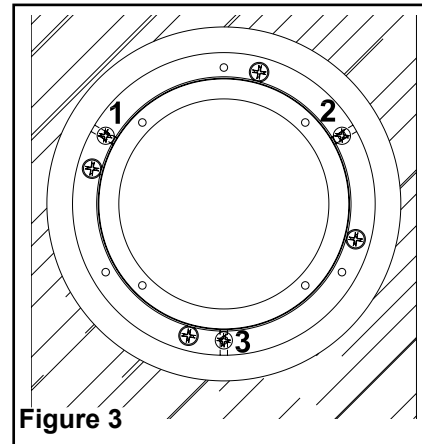


Warning: Hand protection must be worn while performing Step 8.

Step 8 – Install vinyl sheet flooring per manufacturer's instructions.

Step 9 – Using inside edge of the clamping frame seat as a guide, cut 5" [127] diameter hole where flooring over laps the clamping collar.
See **Figure 4a**.

- a. Ensure flooring does not over hang the six hole openings for the clamping frame.
See **Figure 4b** and **4c**.

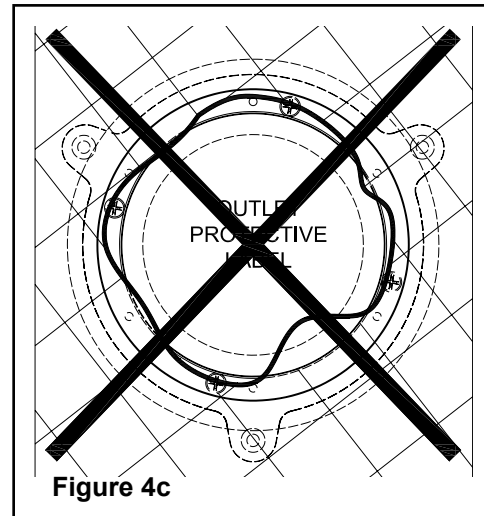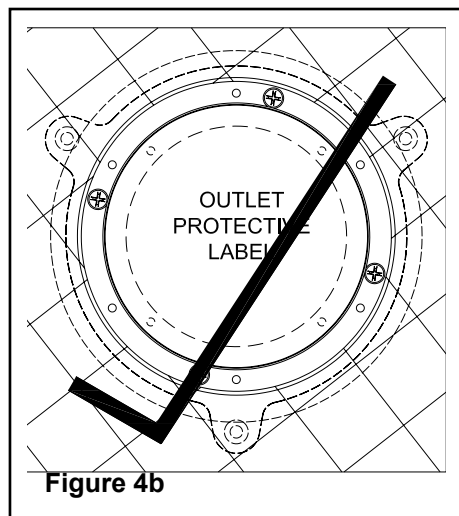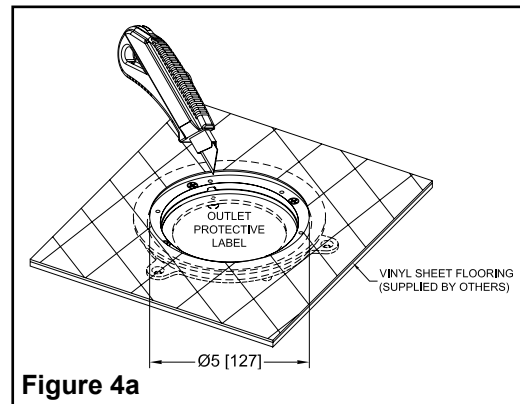



ZPD1-H

ZURN POD PRO SHALLOW FLOOR DRAIN WITH CLAMPING FRAME, CLAMPING COLLAR, AND DROP-IN OUTLET FOR VINYL SHEET FLOORING INSTALLATION INSTRUCTIONS

Step 10 – Remove (3) screws previously placed in step 7.
Then place clamping frame over flooring.
Ensure holes are aligned with collar and
flooring is in between clamping frame and
clamping collar.

Step 11 – Select proper screw bag from table below.
Secure frame to collar using six (6) screws
from selected bag. Tighten screws in a
star pattern to 15-20 in-lbs [1.6-2.3 NM].
See **Figure 5**.

Vinyl Sheet Thickness (mm)	Use Screw Bag
≤ 4	66955-480 C
4.1 thru 6	66955-480 D

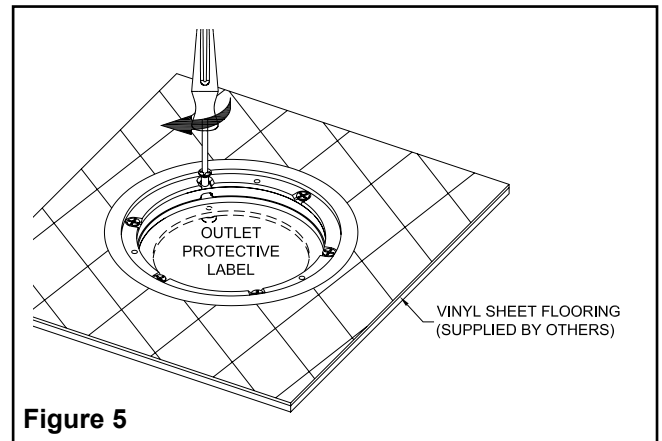


Figure 5

Step 12 – Place strainer into frame and using strainer
screws from bag labeled “B”, tighten screws
to 15-20 in-lbs [2.3-2.8 NM].
See **Figure 6**.

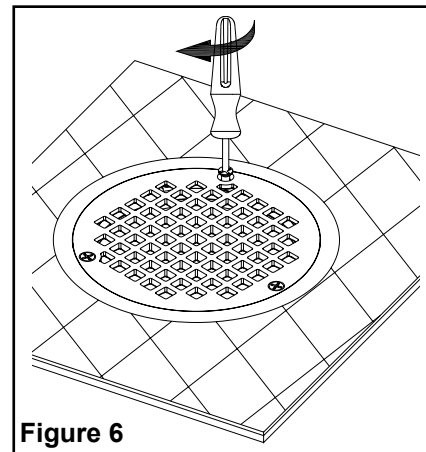


Figure 6

Step 13 – Remove backing from strainer label and
place onto strainer/frame, ensuring the label
is not overhanging the frame edge.
See **Figure 7**.

Step 14 – Place outlet box in POD for shipping or
palletize as necessary.

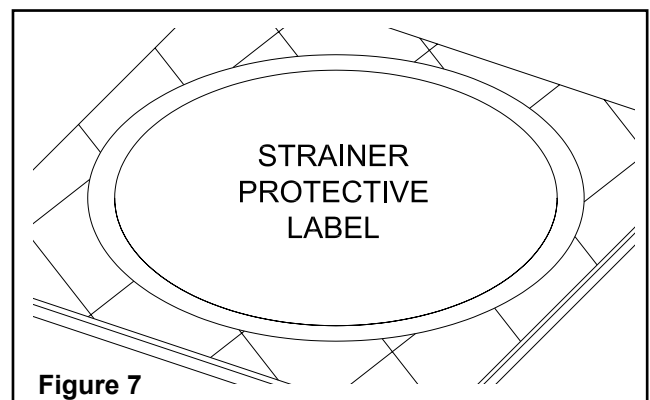


Figure 7



ZPD1-H

ZURN POD PRO SHALLOW FLOOR DRAIN WITH CLAMPING FRAME, CLAMPING COLLAR, AND DROP-IN OUTLET FOR VINYL SHEET FLOORING

INSTALLATION INSTRUCTIONS

Outlet Installation

Note: Ensure steps 1-14 of Drain Installation are complete before continuing.

Step 15 – Once POD is set in place at the job site, open outlet box and remove components.

Step 16 – Remove strainer label and discard.

Step 17 – Remove the strainer, set screws aside. Ensure not to drop screws down the drain. See **Figure 8**.

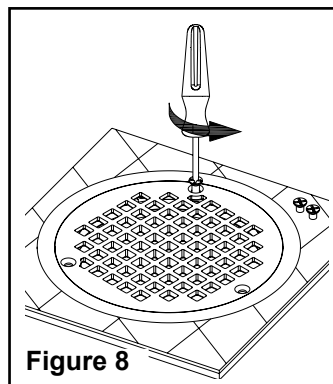


Figure 8

Step 18 – Remove outlet protection label and discard.

Step 19 – Place gasket on body with rib facing up, aligning holes, ensuring gasket lays flat with no wrinkles. See **Figure 9a, 9b, and 9c**.

Note: Do not use additional sealant.

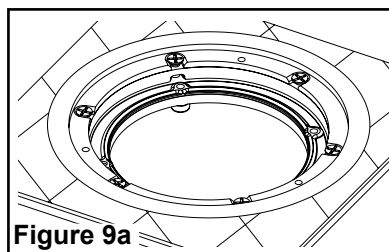


Figure 9a

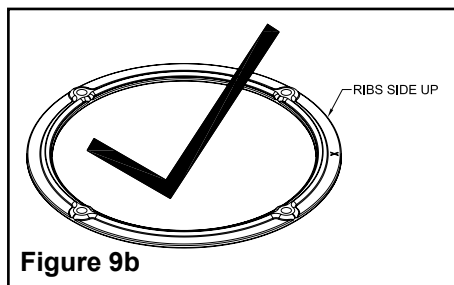


Figure 9b

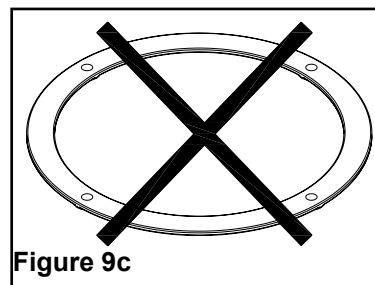


Figure 9c

Step 20 – Cut the outlet pipe to required length prior to installing into drain. Ensure all sharp edges are deburred.

Step 21 – Place outlet on gasket, carefully align holes ensuring not to tear gasket.

Step 22 – Start threading all 4 outlet screws from bag “C”. See **Figure 10**.

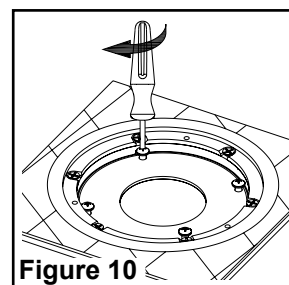


Figure 10

Step 23 – Once all screws are started, in a star pattern torque to 20-25in-lbs [2.3-2.8 N-m].

Step 24 – Place strainer back into frame, reinstall screws and tighten to 20-25in-lbs [2.3-2.8 N-m]. See **Figure 11**.

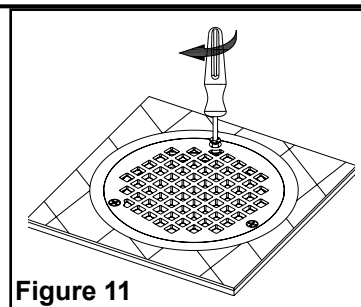


Figure 11