


Required Tools

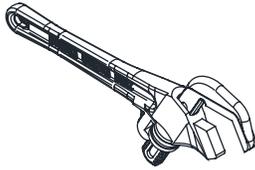

Smooth Jawed
Wrench



Thread Sealant Tape




2mm
Allen Wrench

Installation Instruction

Step 1

Wall Mount/Swivel Mount Installation


Wall mount/swivel mount installation position wall mount where desired (shower head will be approximately 4" above mount). Mark hole locations on wall surface. Be sure mount is straight. Remove mount. Slightly nick center of holes with center punch Drill holes. Insert plastic anchors into holes. Place mount in position insert screws tighten.

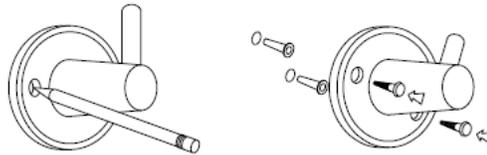

Step 2

Wall bar Installation

- After installing the upper wall-mount bracket on the wall, insert the 24-inch standard wall bar into the upper bracket, ensuring that it is correctly positioned and securely seated.
- While holding the wall bar in proper alignment, position the lower end of the bar against the wall and mark the mounting location for the lower wall-mount bracket (refer to Step 1).
- Proceed to drill the required holes at the marked points and install the lower wall-mount bracket firmly onto the wall.
- Finally, verify that both the upper and lower wall-mount brackets are securely tightened, and ensure that the wall bar is level, stable, and firmly fixed in place.

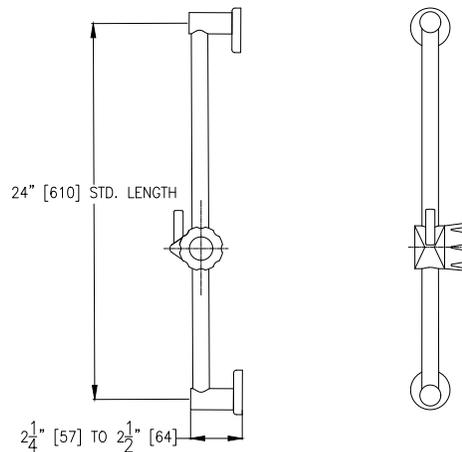


Step 3

Handwall unit Installation

Step (i)

- Align the threaded outlet of the swivel connector with the inlet of the Z7000-H1 hand-held shower head, then rotate the connector clockwise until securely tightened.
- Ensure the threaded connection is clean and ready for assembly
- Confirm the swivel joint moves freely after tightening

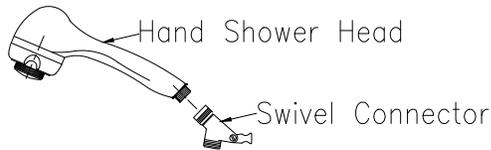

Step (ii)

- Connect one end of the 60-inch metal hose to the bottom port of the swivel connector, ensuring correct alignment of the threaded interfaces
- Tighten by hand until snug




-VB Option:

If your hand shower assembly has been equipped With an in-line (-vb) vacuum breaker, be sure hose end with vacuum breaker is connected at water supply end (not to hand-set)

Step (iii)

- After confirming that the supply elbow and flange are securely mounted to the wall outlet, attach the free end of the metal hose to the outlet port of the supply elbow.
- Hand-tighten to complete the hose connection

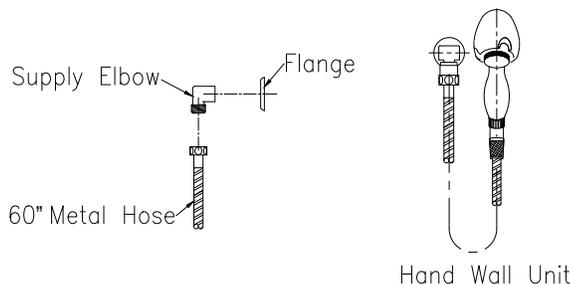

Step (iv)

- Align the swivel connector hole (attached to the hand-held shower head) with the slide lever knob pin on the slide bar
- Gently push the swivel connector onto the pin until it seats securely.
- The swivel connector allows the hand-held shower unit to: hold firmly in place and be easily removed and re-placed when needed.
- Adjust the slide bar to a comfortable height by moving the slide lever knob up or down and then tighten the knob to lock the position securely.

