




Access Panel

Installation, Operation, Maintenance and Parts Manual

Patented and Patents Pending

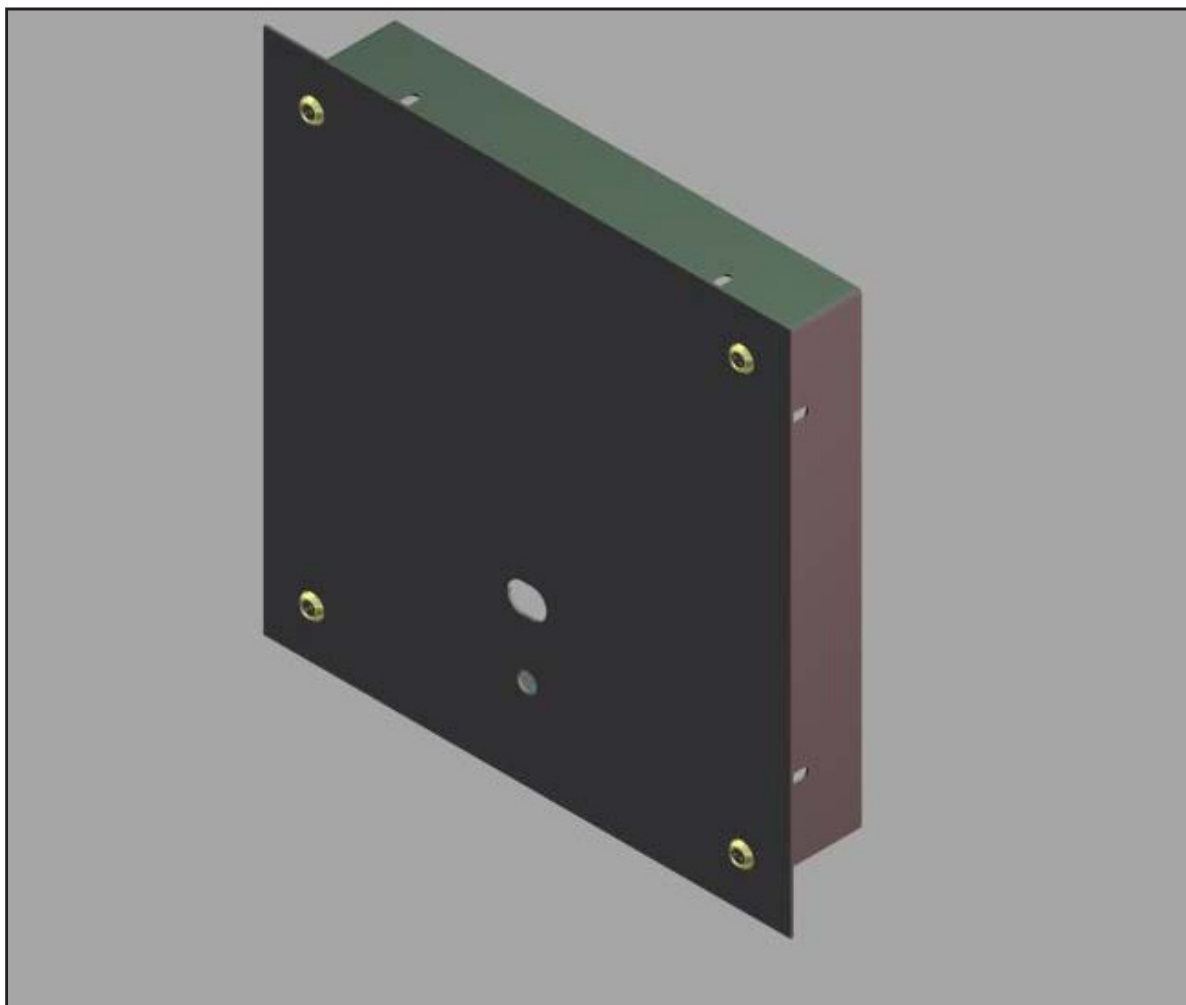

Z6199 Access Panel

- ⚠ CALIFORNIA WARNING:** Risk of cancer and reproductive harm from exposure to nickel (metallic and soluble compounds). See www.P65Warnings.ca.gov.
- ⚠ AVERTISSEMENT EN CALIFORNIE:** Risque de cancer et de troubles de la reproduction en raison de l'exposition au nickel (composés métalliques et solubles). Consulter www.P65Warnings.ca.gov.
- ⚠ ADVERTENCIA PARA CALIFORNIA:** Riesgo de cáncer y daño reproductivo por exposición al níquel (compuestos metálicos y solubles). Consulte www.P65Warnings.ca.gov.

LIMITED WARRANTY

All goods sold hereunder are warranted to be free from defects in material and factory workmanship for a period of three years from the date of purchase. Decorative finishes warranted for one year. We will replace at no costs goods that prove defective provided we are notified in writing of such defect and the goods are returned to us prepaid at Sanford, NC, with evidence that they have been properly maintained and used in accordance with instructions. We shall not be responsible for any labor charges or any loss, injury or damages whatsoever, including incidental or consequential damages. The sole and exclusive remedy shall be limited to the replacement of the defective goods. Before installation and use, the purchaser shall determine the suitability of the product for his intended use and the purchaser assumes all risk and liability whatever in connection therewith. Where permitted by law, the implied warranty of merchantability is expressly excluded. If the products sold hereunder are "consumer products," the implied warranty of merchantability is limited to a period of three years and shall be limited solely to the replacement of the defective goods. All weights stated in our catalogs and lists are approximate and are not guaranteed.

PRIOR TO INSTALLATION

Prior to installing the Zurn Access Panel, install the items listed below.

- All plumbing is to be installed in accordance with applicable codes and regulations.
- Water supply lines must be sized to supply an adequate volume of water for each fixture.
- Flush all water lines prior to making connections.
- Sensor Units should not be located across from each other or in close proximity to highly reflective surfaces.

INSTALLING THE ACCESS PANEL

- 1.) Access panel location and sensor/button orientation should be based on the submittal sheet or catalog page of each product.
- 2.) Determine access panel size (12 x 12, 15 x 15, 13 x 17) using dimensions A and B from the chart below.
- 3.) Using dimensions A and B from the chart below, cut a hole into the wall for the access panel frame. Make sure dimensions A and B are correctly matched to the size of the access panel which is being installed.
- 4.) Using the slots provided on the frame, secure the access panel frame to the inside of the wall with the appropriate fasteners for the given wall construction.
- 5.) See the figures on the following pages for examples of typical access panel styles for the ZH, ZEMS, ZER, and ZEG options.

Product No.	Size	A	B	C	D	E	F
Z6199-BX12	12 x 12[305 x 305]	12 [305]	12 [305]	13 1/2 [343]	13 1/2 [343]	5 1/2 [140]	5 1/2 [140]
Z6199-BX15	15 x 15[368 x 368]	15 [368]	15 [368]	16 1/2 [419]	16 1/2 [419]	7 [178]	7 [178]
Z6199-BX17	13 X 17[330 x432]	17 [432]	13 [330]	14 1/2 [368]	18 1/2 [470]	6 [152]	8 [203]

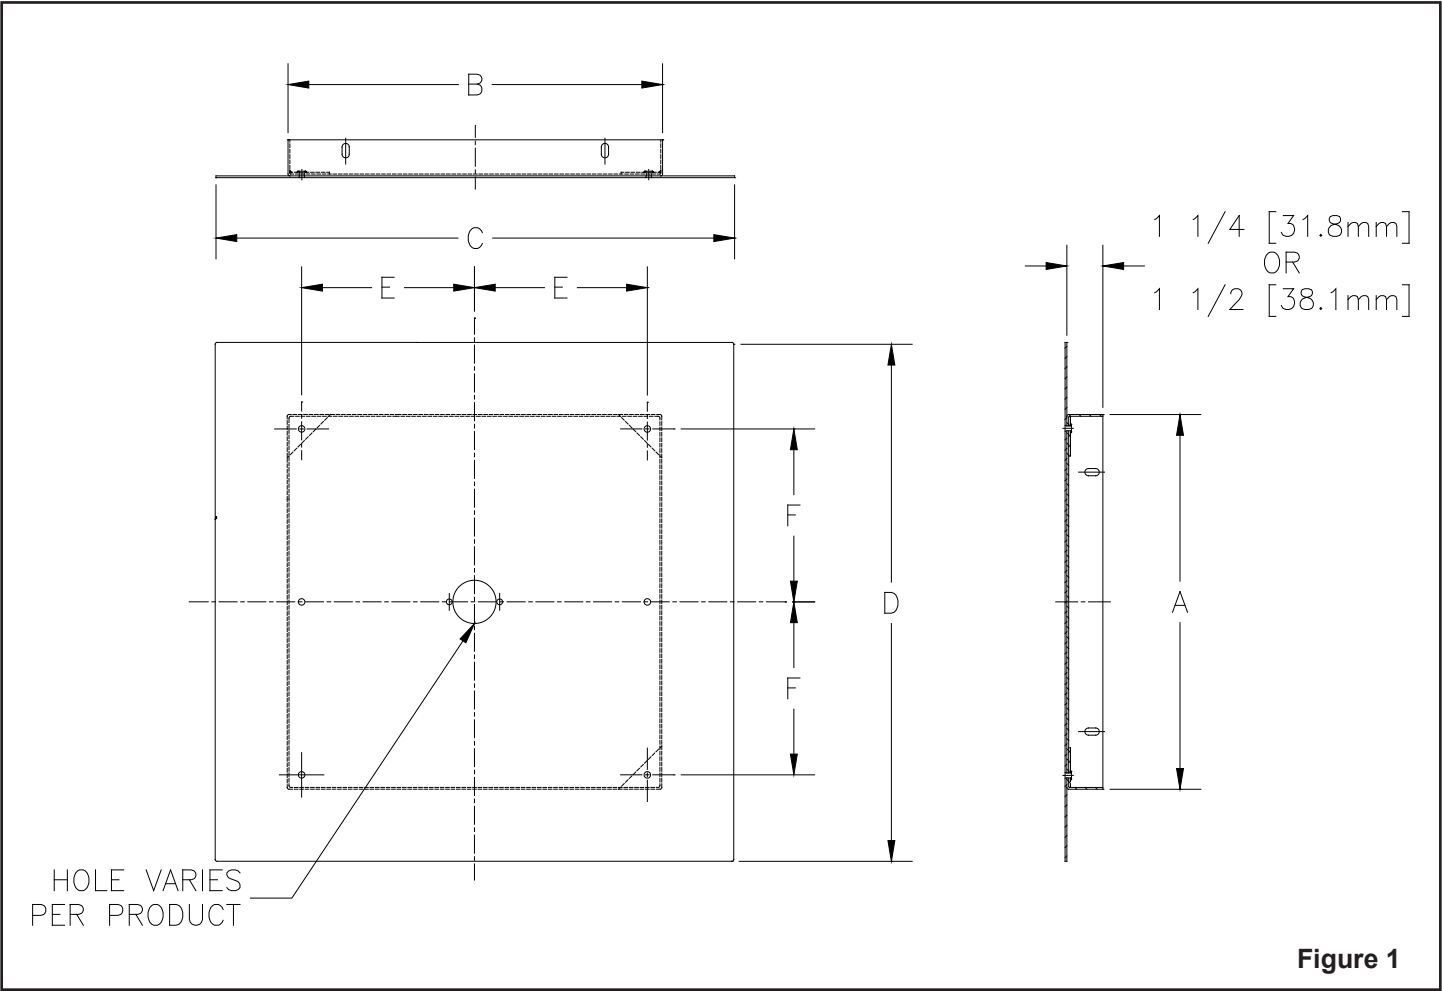


Figure 1

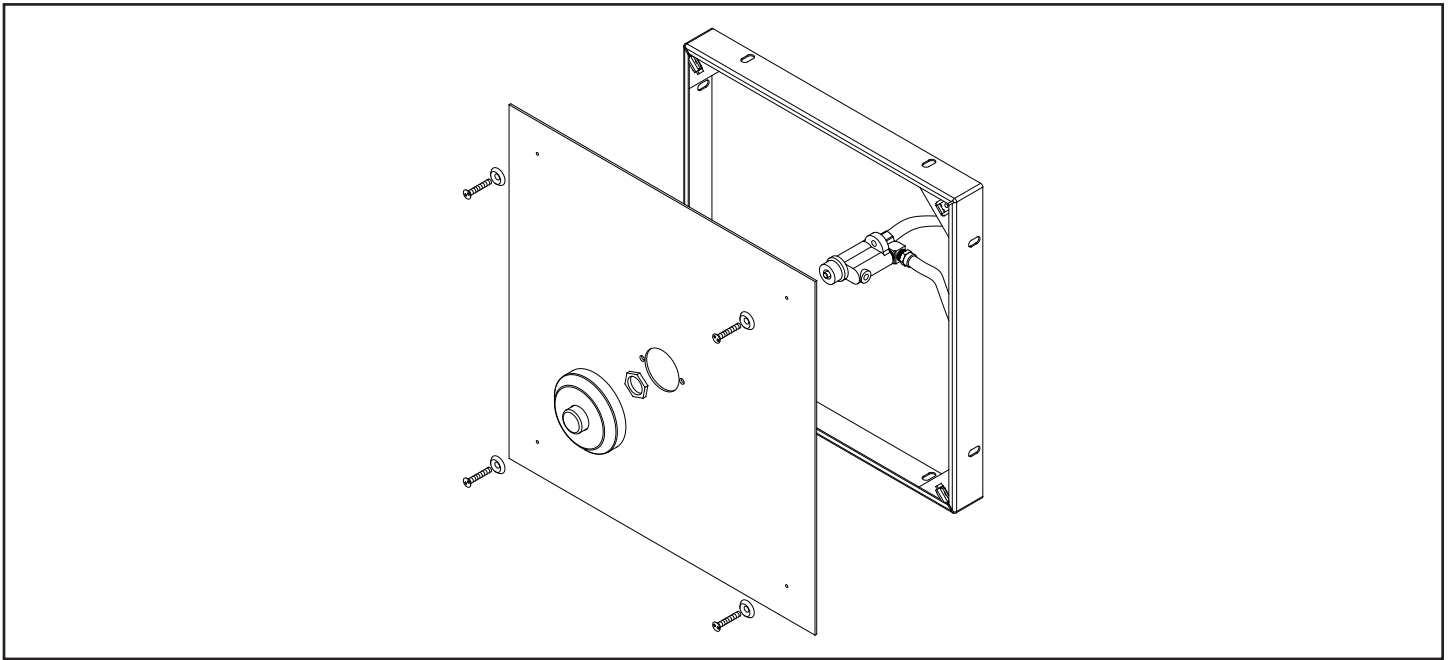


Figure 2: Access panel with hydraulic option.

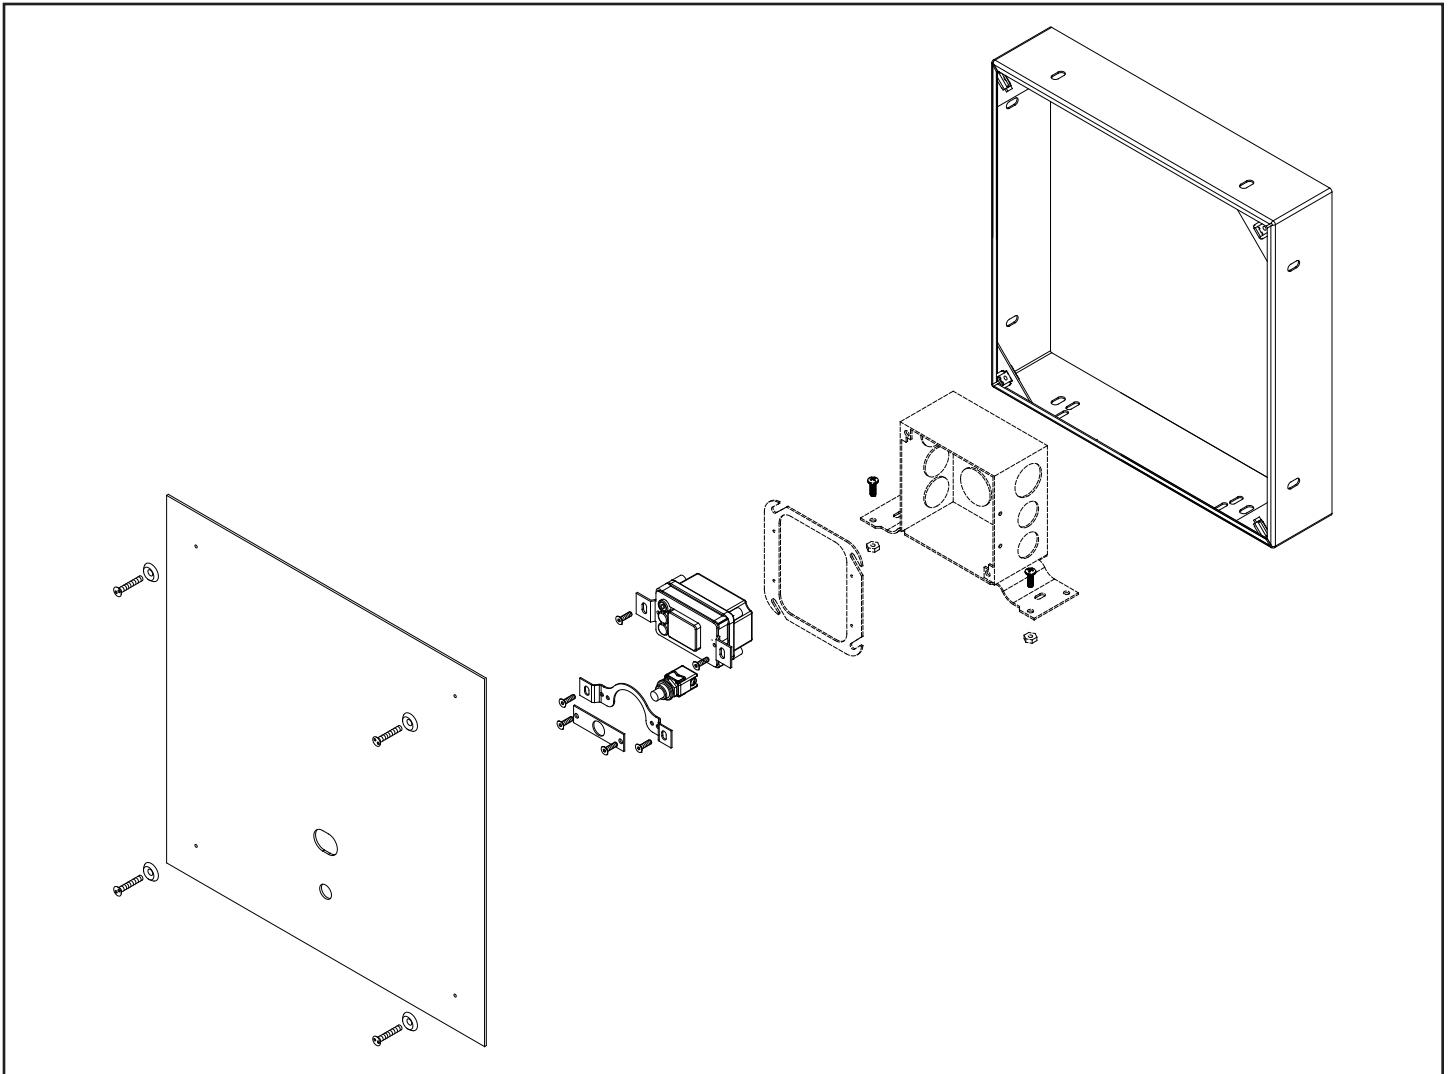


Figure 3: Access panel with ZEMS option.

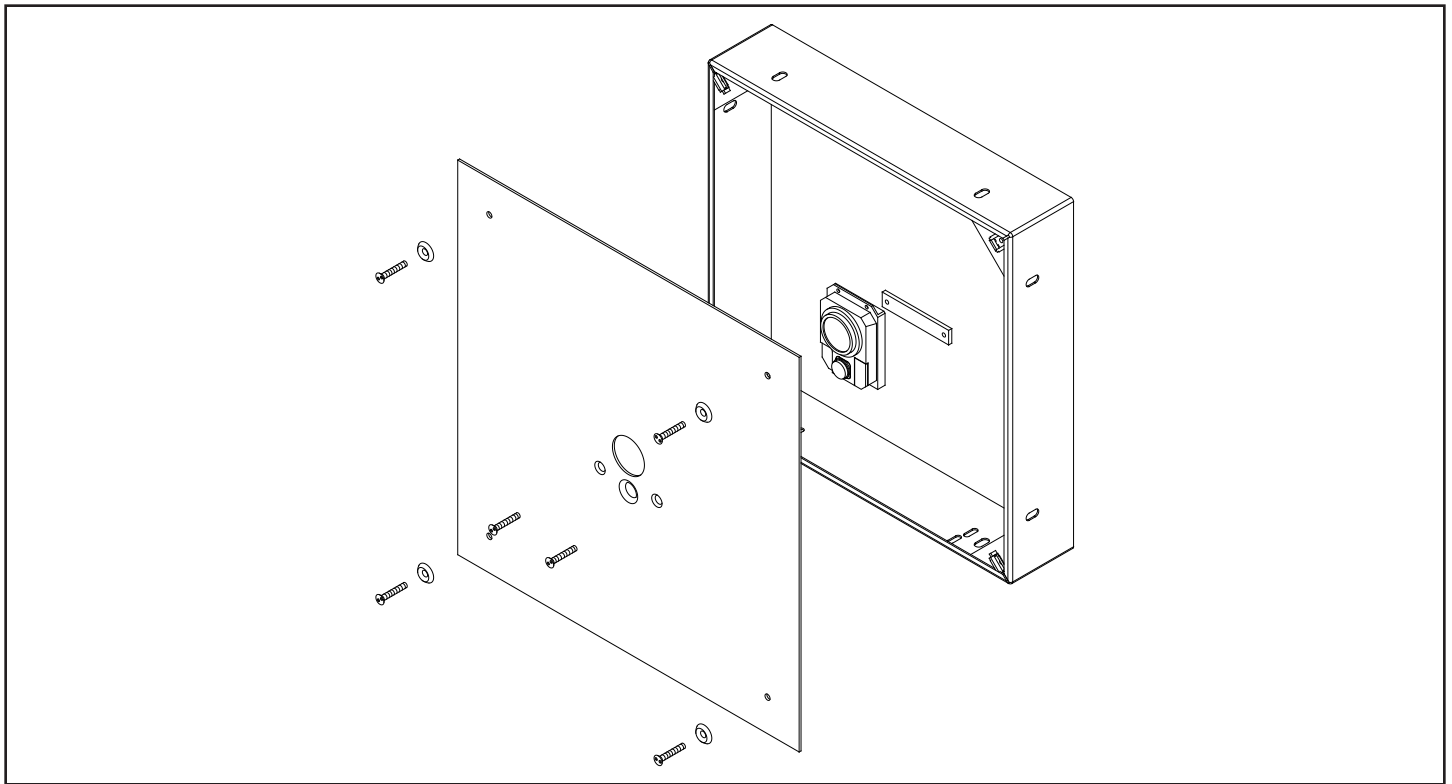


Figure 4: Access panel with EZ flush option.

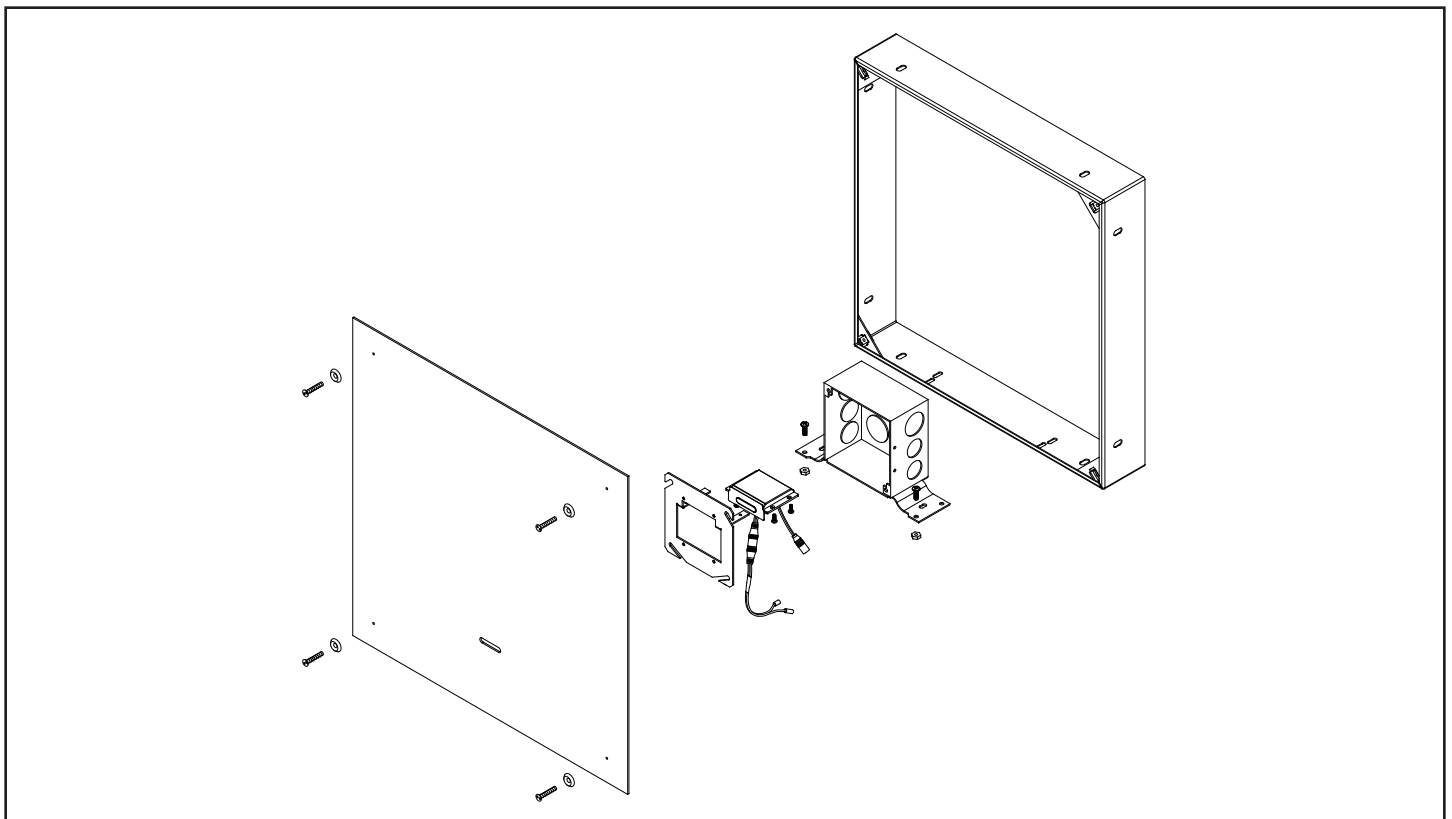


Figure 5: Access panel with Pint sensor option.