




GRZE™ Lid Gasket Installation Instructions

WARRANTY NOTICE: Failure to adhere to these installation instructions, installation by unqualified personnel, or selecting an unsuitable product for the application may void any warranty associated with the product.


IMPORTANT SAFETY INFORMATION: Appropriate personal protection equipment (PPE) is required during installation of this product to minimize the risk of injury (e.g. safety glasses, hand protection, etc).

This document is intended for the removal and replacement of the gasket under the lid for the GRZE™ interceptor.

Step 1 – Remove bolts and sealing washers from interceptor and place hardware in a secure location as shown in **Figure 1**.

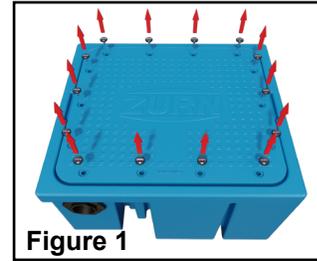


Step 2 – Remove lid from the interceptor and flip so that underside is exposed to access the gasket as shown in **Figure 2**. Peel off existing gasket from lid. Scrape any existing adhesive from gasket off the lid. Wipe the gasket slot area on the lid with 70% or higher isopropyl alcohol to remove any existing adhesive/grease and pat dry.

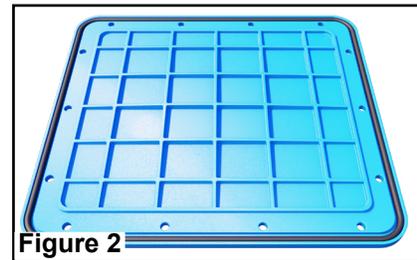


Step 3 – Remove adhesive backing cover from new gasket in bag and begin installing gasket onto lid ensuring not to bunch up the gasket.

Caution: To ensure a proper seal, the gasket seam must be aligned with a lock down hole.

Step 4 – Make sure to apply pressure along the entire gasket to ensure the adhesive is sticking to the lid as shown in **Figure 3**.

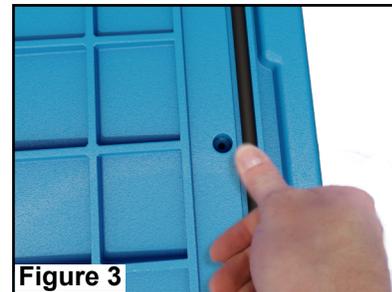

Step 5 – Place lid on the interceptor and tighten bolts to 40-50 in-lbs as shown in **Figure 4**.

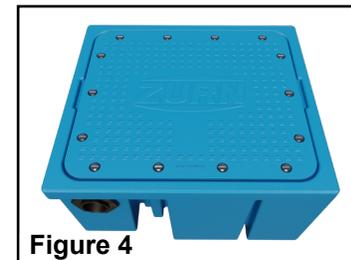

⚠ WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov

⚠ ADVERTENCIA: Cáncer y daño reproductivo - www.P65Warnings.ca.gov

⚠ AVERTISSEMENT: Cancer et effets néfastes sur la reproduction - www.P65Warnings.ca.gov

Zurn Industries, LLC | Specification Drainage Operation
1801 Pittsburgh Avenue, Erie, PA 16502, Ph. 855.663.9876

In Canada | Zurn Industries Limited
7900 Goreway Drive, Unit 10, Brampton, Ontario L6T 5W6, Ph. 877.892.5216

www.zurn.com

Rev. -
Date: 01/05/26
C.N. No. 146502
Patent zurn.com/patents
Form# IT116

| Page 1 of 1